

Vectrox™
ARCADE SYSTEM

Σ SPIKE

GCE

A Milton Bradley Company

© General Consumer Electronics, Inc. 1983. Santa Monica, CA 90401. All Rights Reserved.

* Spike is a trademark owned and licensed by Entex Industries, Inc.

SPIKE

 


he dastardly villain, Spud, has kidnapped our heroine, the lovely and oh so innocent, Molly, and taken her far away to his secret hideout. “Eek! Help, Spike!”


Spike, our courageous hero and Molly’s true love, races to her rescue. He’ll be relying on your skills and split-second timing to help him in his quest to save poor Molly. Maneuver Spike through treacherous obstacles and avoid the dangerous creatures along the way to Spud’s hideout. If you’re successful, Spike can rescue Molly and the two will live happily ever after—that is until Spud strikes again. “Oh. No!”

Setting Up

Screen Overlay

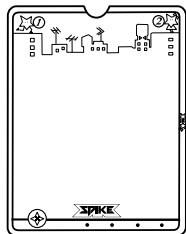

Console

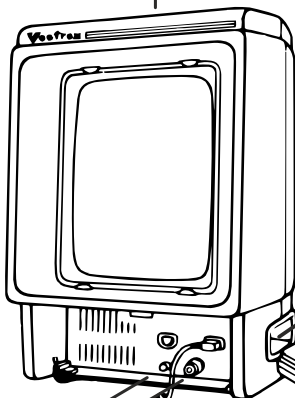 

Power Cord

 
Cartridge Slot

Reset Button

Off/On/
Volume Control

Built-in
Control Panel

SPIKE
Cartridge

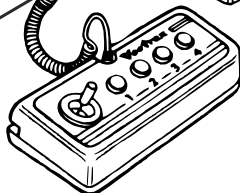

Setting Up

- Make sure the console power cord is plugged into a 120 volt AC 60 cycle electrical outlet.
- Check to be sure the plug for the built-in control panel is firmly seated in the control panel outlet on the right.
- **MAKE SURE THE CONSOLE IS TURNED OFF BEFORE INSERTING THE CARTRIDGE.** Insert the cartridge into the slot with the label side up. Be sure it is firmly inserted to the guideline marked on the cartridge.
- Insert the screen overlay behind the tabs at the top and bottom of the screen.
- Turn the Off/On/Volume Control to the ON position (clockwise). You will see the Vectrex title for a few seconds, then the name of the game.
- Adjust the volume control to the desired listening level.

 
Spike Controls

Ladder/Cage

Changes the position of the ladder and the cage on the ladder and the cage on the top level. Also selects one or two-player game.

Kick Right

Controls Spike's right kick.

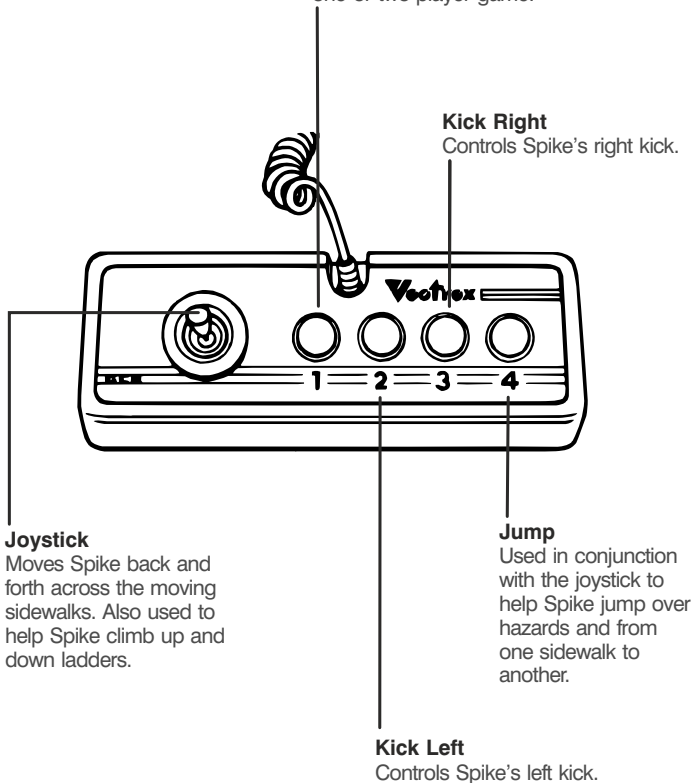

Joystick

Moves Spike back and forth across the moving sidewalks. Also used to help Spike climb up and down ladders.

Jump

Used in conjunction with the joystick to help Spike jump over hazards and from one sidewalk to another.

Kick Left

Controls Spike's left kick.

How To Play

Spike can be played with one or two players. In the two-player game, only the built-in control panel is used and the play alternates between the players each time a Spike is defeated.

Player Selection

When **PLAYER 1** appears on the screen, press Button 1 once to switch to a two-player game. **PLAYER 2** will then be displayed on the screen. To return to a one-player game, press Button 1 again before starting game play.

Starting Game Play

The game starts when Button 4 is pressed.

Game Play

Our lovely and innocent heroine, Molly has been kidnapped by the evil Spud! Only Spike can save her from this fate worse than death! Spike will have to be maneuvered through treacherous obstacles and dodge dangerous creatures along the way so be prepared for evil encounters ... of the worst kind.

As soon as Spike kicks in the door to the villain Spud's hideaway, the game field appears. Spike enters on the bottom catwalk ... and then *you* have control of Spike!

There are three catwalks connected by a moveable ladder. Above the top catwalk, Molly has been imprisoned by Spud inside a cell with bars on the window. In order to help Spike rescue poor Molly, you must maneuver him to pick up the key to the cell—then get him up to the top catwalk using the ladders. The ladders can be moved by pressing Button 1. The key will appear on your screen in different locations so you'll have to move Spike quickly to pick it up.

When spike reaches the top level and possesses the key to Molly's cell, help him free his true love by positioning

him under the cage and jumping to rescue her! If Spike is defeated, he'll have to start again from the bottom catwalk!

After your first round, Spud's evil Bouncers appear as Spike's opponents. They'll do anything to keep Spike away from Molly's secret prison cell! On the third and successive rounds, Birds join the Bouncers in their attack against Spike! As the game progresses, these creatures will move faster and faster. Help Spike kick the Bouncers and Birds and earn extra points.

Look for Molly's bow after the first round of play. This bow will fall from her cell, and if Spike catches it, all opponents will freeze for a short time, allowing him to advance more safely toward Molly's cell.

Spike is allowed four defeats in each game (more if you earn additional lives during the course of gameplay). He can be defeated by falling from a catwalk with no catwalk underneath... by falling off the side of the screen... or by contact with a Bird or Bouncer.

As you progress through higher levels of the game, the catwalks will change direction each time Spike destroys a Bouncer or Bird with his powerful kick.

In a one-player game, play continues until Spike has suffered four defeats. In a two-player game, play continues until both players have suffered all four defeats... high score determines the winner.

The Heroes and Villains



Spike is our hero and the character you control!

By using the joystick, make him walk right or left on the catwalks or climb up and down ladders connecting the three levels or help him jump over hazards (the joystick and Button 4 are used simultaneously for the jump feature). Remember that Spike can kick both right and left when he's on a catwalk and when he's jumping... but never on a ladder!



Spud is the villain and Molly's evil kidnapper. He appears on the screen, kidnaps our poor heroine and then disappears, locking Molly in his secret prison cell.



Molly, our heroine, is kidnapped and taken to Spud's hideout. Until Spike rescues her, all we will see of poor Molly is her bow which gently drops from her cell onto the catwalks to signal Spike and help lead him to her rescue.



Bouncers don't look terribly evil, but watch out! They bounce and move horizontally across the catwalks ... and they're out to get poor Spike! These are Spud's pets ... they'll do anything to keep Spike from getting to Molly's cell.



Birds have flapping wings and are the most dangerous opponents. They will move across the screen above a catwalk — and they can swoop down a level and attack our hero! Birds are also controlled by the villainous Spud, so watch your step!

Scoring

Earn points as follows:

Action	Points
Kicking a Bouncer	100
Kicking a Bird	200
Collecting a Key	500
Opening Molly's Cell	2000
Earn a bonus life (an additional allowed defeat) for each 10,000 points earned.	

High Score Memory

As long as your machine is on with the SPIKE cartridge in place, the high score is retained. Once the machine is turned off and the cartridge removed, the high score is lost. To view the high score, press the Reset Button on the console.

Restarting Game

To restart after a completed game with the same number of players, simply push any of the buttons on the control panel. If you wish to restart the game before it is completed or change the number of players, press the Reset Button on the console.

90 Day Limited Warranty

This Video Game Cartridge is warranted by General Consumer Electronics, Inc. to the original consumer purchaser in the U.S.A. for a period of 90 days from the original purchase date under normal use and service against defective workmanship and materials. ANY IMPLIED WARRANTIES ARE ALSO LIMITED IN DURATION TO THE NINETY (90) DAY PERIOD FROM THE ORIGINAL PURCHASE DATE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty is void if the GCE Video Game Cartridge has been damaged by accident, unreasonable use, neglect, misuse, abuse, improper service, modification, subject to commercial use or other causes not arising out of defects in workmanship or materials and is limited to electronic and mechanical parts contained in the cartridge.

GENERAL CONSUMER ELECTRONICS, INC. SHALL NOT BE LIABLE FOR LOSS OF USE OF THE VIDEO GAME CARTRIDGE OR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS. EXPENSES OR DAMAGES INCURRED BY THE PURCHASER RESULTING FROM BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES ON THE VIDEO GAME CARTRIDGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

During the warranty period, if found to be defective due to workmanship or materials, the GCE Video Game Cartridge will at the option of General Consumer Electronics, Inc. be repaired or replaced with a new or reconditioned GCE Video Game Cartridge without charge for parts or labor when returned by Purchaser with proof of purchase date, shipped prepaid to General Consumer Electronics, Inc. at the following address:

General Consumer Electronics, Inc.

233 Wilshire Boulevard.

Santa Monica, California 90401.

In the event that your GCE Video Game Cartridge is replaced, the warranty on the replacement will be ninety (90) days from the date of its return to you.

Order Form for Replacement Screen Overlays

Additional screen overlays may be ordered by completing this form and mailing it with your check or money order for \$2.00 each.

Address check or money order to:

**GCE, Vectrex Screen Overlays, P.O. Box 8123,
San Francisco, CA 94128**

Please allow 2-3 weeks for delivery. Offer subject to availability.

Note: Separate cartridges are needed for the overlays listed below.

SCREEN OVERLAY

Mine Storm	Solar Quest	Spike
Armor Attack	Space Wars	SpinBall
Berzerk	Star Hawk	Web Wars
Clean Sweep	Star Trek	Pole Position
Hyperchase	Blitz!	Dark Tower
Cosmic Chasm	Heads-Up	Star Castle
Rip-Off	Fortress of Narzod	Others _____
Scramble	Bedlam	(specify)

SCREEN

SCREEN OVERLAY (fill in)	QUANTITY (fill in)	COST (fill in)
_____	_____	@ \$2.00 \$
_____	_____	@ \$2.00
_____	_____	@ \$2.00
_____	_____	@ \$2.00
_____	_____	@ \$2.00
_____	_____	@ \$2.00
Total Overlays Ordered		Total Costs \$
Calif. Residents Add 6% Sales Tax		\$
Total Amount Enclosed		\$

Name _____ Phone () _____

Address _____

City _____ State _____ Zip _____



GCE

A Milton Bradley Company

PART NO. 140016-0018 ART REV A REPRO

9872U-063